QuickStartGuide

ARIR150

www.arinfiniteradio.com

Congratulations on purchasing your new Acoustic Research Wi-Fi Infinite Radio.
Please follow these instructions to set up and start using the radio.

1 Unpack the unit

You should find the following items in the box:

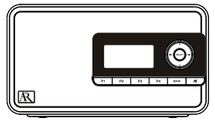

Radio

Power adapter

Quick Start Guide

Setup Information Card

Additional requirements

- Broadband Internet service
- Broadband (cable/DSL) modem, usually supplied by your Internet service provider
- 802.11 b or g (Wi-Fi) wireless home network

For Wi-Fi connections, you may also need:

- Your wireless network's SSID
- Your access password (for secure networks)

2 Set up your **AR Infinite Radio accounts**

To simplify setup on the radio please complete these steps:

A. Find the Setup Information Card that contains your radio's MAC address number (MAC: 00-21-2A-XX-XX-XX) and activation PIN # (PIN: XXXX). (This number is also found in the Device Info screen under the Settings menu in your radio.)

B. Using any Internet-connected computer, go to **www.arinfiniteradio.com/setup** and follow the online instructions.

- You will need to input your radio's MAC address and PIN # to associate your radio with your personal settings.

3 *Optional:* Insert AAA batteries at the back of the radio

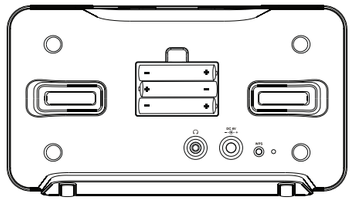

Follow the polarity markers in the battery compartment.

The batteries (not included) power the clock and alarm whenever the radio loses electricity.

4 Plug in and turn on the radio

Only use the power adapter which is included with your product.

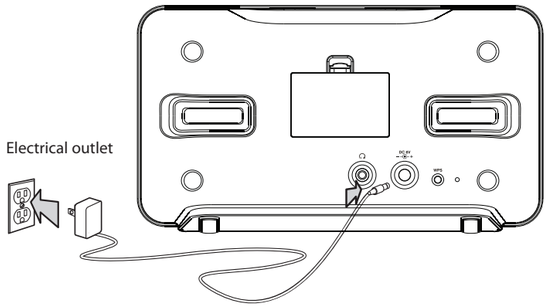

5 Set up the radio

A. **NOTE:** When you turn on the radio for the first time, the radio displays the **Select Language** screen. Choose your preferred language.

B. The radio initializes the **Wi-Fi network** and search for available networks. Choose your desired network. If the network is secure, enter your password in the **Network Security** screen. Refer to the gray box on the right for Character Entry in order to input your network key or passcode.

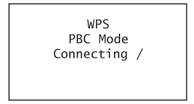

- If your router supports WPS connection, you can press the WPS button at the back of the radio to activate the WPS mode.

Remember to activate the WPS connection on your router. You may refer to the router's user manual on how to enter WPS mode.

- Refer to the User manual if you want to select the connection method manually.

C. The radio should now connect to the Internet. If the radio does not connect refer to the troubleshooting section in your user manual.

After connecting to the Internet

- If you did not activate your Infinite Radio accounts, or if the radio cannot get your details from the Infinite Radio server, the radio may ask for your country. Input your country. Select your country and then input your ZIP code (US), Postal code (Canada) or city (Mexico) accordingly.

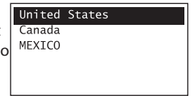

- If your radio has successfully connected to the Internet you will hear a welcome message streaming from the Internet.

Learn more about your Infinite Radio

Visit **www.arinfiniteradio.com** to **download the user manual** for your radio. **Read the user manual** for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).

Need more help?

Do not return this product to the store.
Visit **www.arinfiniteradio.com** to get the latest firmware updates and FAQ's.

Character Entry

Use the navigation controls to make choices and input information:

⏮ – move selection/navigate left
⏭ – move selection/navigate right
SELECT - confirm selected option or character

When inputting characters, press ⏮ or ⏭ to choose among uppercase, lowercase, numeric, special characters or end entry. To correct mistakes, press 🏠. To exit the input screen without saving, press 🏠 until return to previous screen.

About passphrase:

- This radio supports secured access points using the Wired Equivalent Privacy (WEP) keys or Wi-Fi Protected Access (WPA and WPA2) standards.
- WEP keys are either 10 or 26 characters long (e.g. 6E78214A52). Note that some Wi-Fi routers support passphrase generation for WEP security. However, there is no industry standard for WEP passphrase generation and *this radio does not support WEP passphrases.*
- If you are using a WEP secured access point, enter the WEP key (HEX format) instead of the passphrase.

Controls

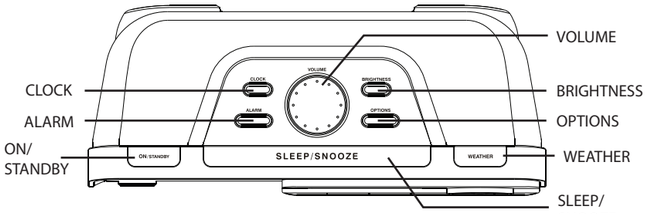

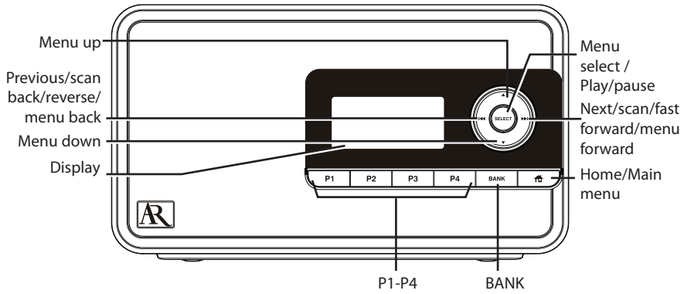

Rear panel connections

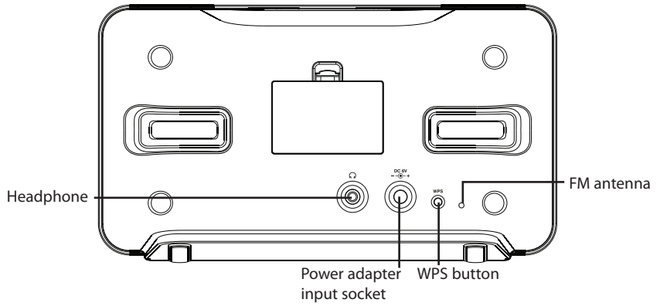

Using the radio

General procedures

Turn on/off (standby) the radio	Press **ON/STANDBY**.
Choose an audio source	Press ⌂ and then ▲ or ▼ to cycle through the audio sources (Internet Radio, MP3tunes or FM).
Choose a preset radio station	Press **BANK** and **P1/P2/P3/P4** to choose a preset radio station.
Assign the current radio station to a preset	Press and hold **P1/P2/P3/P4** to store the current station to that preset button in **Bank 1**. To store station in **Bank 2** or **Bank 3**, press **BANK** twice or thrice respectively. When the screen displays the **Bank 2** or **Bank 3**, press and hold **P1/P2/P3/P4** to store the current station to that preset button in **Bank 2** or **Bank 3** respectively**.**
Display the menu while listening	Press ⌂ .
Start the sleep timer	Press **SLEEP/SNOOZE**.
Add time or cancel the sleep timer	Press **SLEEP/SNOOZE** repeatedly.
Display the time	Press **CLOCK**.
Set the time	Press and hold **CLOCK.** Press ▼ to choose **Manual** and then press **SELECT**. Press ⏮ or ⏭ to choose hours and minutes. Press ▲ or ▼ to adjust the time. Press **SELECT** to set the time.
Set the alarm	Press **ALARM** once. Then press ▲ or ▼ to choose **Turn On**, **Turn Off**, **Set Alarm Time**, or **Select Sound** and then press **SELECT**.

Listening to Internet radio

Choose an Internet radio station	Press ⌂ then ▲ or ▼ to choose Internet Radio. Press ▲ or ▼ to move up and down the menu options and press **SELECT** to navigate to the desired station. My Genres My Favorites Music Talk
Start playing the selected station	Press **SELECT**.
Mark the current station as a favorite	Press **OPTIONS** to display the Option menu. Press ▼ to choose **Add to Favorites** and then press **SELECT**.
Remove the current station from My Favorites	Press **OPTIONS** to display the Option menu. Press ▼ to choose **Remove from Favorites** and then press **SELECT**.
Use the current station as the alarm sound	Press **OPTIONS** to display the Option menu. Press ▼ to choose **Send to Alarm** and then press **SELECT**.

Listening to MP3tunes

Set up MP3tunes Locker	Refer to the MP3tunes section of the user manual.
Play an audio file from MP3tunes Locker	Press ⌂ to choose MP3tunes. Press ▲ or ▼ and then **SELECT** to enter or exit categories. Press ▲ or ▼ to highlight a file and press **SELECT** to start playback.
Pause playback	Press **SELECT**. Press again to resume.
Skip to the next audio file	Press ⏭ .
Skip to the previous audio file	Press ⏮ .

Listening to FM radio

Tune in an FM radio station	Press ⌂ then ▲ or ▼ to choose FM. Press and hold ⏮ or ⏭ to seek. The radio stops searching when it detects the next station.
Step through the radio frequencies	Press ⏮ or ⏭.
Use the current station as the alarm sound	Press **OPTIONS** to display the Option menu. Press **SELECT** to **Send to Alarm**.

Listening to Weather Forecasts

Listen to today's local forecast	Press **WEATHER** once.
Listen to 3-day local forecast	Press **WEATHER** twice.
Listen to Weather Alert when the alert asserts	Press **WEATHER** once.

© 2010 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032
Trademark Registered
Printed in China

Visit **http://store.audiovox.com** to find the best accessories for your products.

For Customer Service
Visit Our Website At
www.arinfiniteradio.com
Product Information, Photos, FAQ's, Owner's Manuals

AR INFINITE RADIO